

Tension Cord Universal

Item number 379

- 1. Set the tension cord to the length of your bow and fix the knots.**
- 2. Slide the leather case over the lower end of the bow. Make sure that the string lies exactly in the notch of the bow tip.**
- 3. Slide now the other end of the tension cord over the tip of the upper end of the bow. Make sure that the rubberized surface is as close as possible at the bow tip to protect the limb from excessive load and damage.**
- 4. Place yourself on the tension cord with both feet and pull the bow upwards while you slide the string into the notch of the tip of the bow.**



To relax the bow, do the same procedure in the opposite direction

